

PITCHING INSTRUCTIONS FOR TERRAIN HAVEN TENTS

FLYSHEET FIRST PITCHING

- Assemble poles and lay them parallel on the ground (3 poles – 2 longer diagonal poles and 1 shorter porch pole).
- The poles are colour coded to match corresponding pole sleeve entry point.
- Open out flysheet and position in required direction.
- Insert the two longer poles diagonally through pole sleeves on outside of flysheet.
- Insert the shorter porch pole into front pole sleeve over doorway.
- Locate one end of each diagonal pole onto pin system at flysheet corners. The metal pin inserts into the hollow metal ferrule on the end of each pole.
- Push each diagonal pole into an arch from opposite end and locate pole ends onto corresponding pin system.
- Locate one end of the porch pole onto corresponding pin system.
- Push porch pole into an arch from opposite side and locate pole end onto pin system.
- Peg down all rings of ring and pin system using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip.
- Pull out porch doorway and peg down elastic pegging points at the base using pin-pegs.
- Peg out all remaining shock-cord pegging points on the base of the flysheet using pin-pegs.
- Peg out ALL guy lines using pin-pegs ensuring that guy line fabric attachment points are evenly tensioned.

INNER (When pitching flysheet first)

- Open out inner inside flysheet and position doorway to correspond with flysheet entrance.
- Starting from the rear corners of the tent, attach the hooks on the groundsheet to corresponding ring on base of the flysheet.
- Suspend inner to flysheet by means of elasticated toggles on inner tent to corresponding rings on inside of flysheet.
- Attach hooks on porch groundsheet to corresponding rings on base of flysheet

ALL-IN-ONE PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.



haven200

PITCHING INSTRUCTIONS FOR TERRAIN HAVEN TENTS

FLYSHEET FIRST PITCHING

- Assemble poles and lay them parallel on the ground (3 poles – 2 longer diagonal poles and 1 shorter porch pole).
- The poles are colour coded to match corresponding pole sleeve entry point.
- Open out flysheet and position in required direction.
- Insert the two longer poles diagonally through pole sleeves on outside of flysheet.
- Insert the shorter porch pole into front pole sleeve over doorway.
- Locate one end of each diagonal pole onto pin system at flysheet corners. The metal pin inserts into the hollow metal ferrule on the end of each pole.
- Push each diagonal pole into an arch from opposite end and locate pole ends onto corresponding pin system.
- Locate one end of the porch pole onto corresponding pin system.
- Push porch pole into an arch from opposite side and locate pole end onto pin system.
- Peg down all rings of ring and pin system using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip.
- Pull out porch doorway and peg down elastic pegging points at the base using pin-pegs.
- Peg out all remaining shock-cord pegging points on the base of the flysheet using pin-pegs.
- Peg out ALL guy lines using pin-pegs ensuring that guy line fabric attachment points are evenly tensioned.

INNER (When pitching flysheet first)

- Open out inner inside flysheet and position doorway to correspond with flysheet entrance.
- Starting from the rear corners of the tent, attach the hooks on the groundsheet to corresponding ring on base of the flysheet.
- Suspend inner to flysheet by means of elasticated toggles on inner tent to corresponding rings on inside of flysheet.
- Attach hooks on porch groundsheet to corresponding rings on base of flysheet

ALL-IN-ONE PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.



haven300