

# PITCHING INSTRUCTIONS FOR REFUGE TENT

## FLYSHEET FIRST PITCHING

- Assemble poles and lay them parallel on the ground (three poles all the same length and diameter)
- Open out flysheet and position in desired direction.
- Locate pole sleeves on outside of flysheet and insert all three poles, pushing it right through into the fabric socket the opposite end.
- Push each pole into an arch from opposite end and locate pole ends onto corresponding eyelet on pole anchor straps.
- Peg down the tent at the base of each pole. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip.
- Pull out the porches and peg down elastic pegging points at the base using pin-pegs.
- Peg out all remaining flysheet pegging points on the base of the flysheet using pin-pegs.
- Peg down both straps that go across the doors, to prevent a tripping hazard.
- Peg out ALL guy lines using pin-pegs ensuring that the guy line fabric attachment points are evenly tensioned.
- Tighten up the adjustable tension straps, located at base of the poles to maximise stability.

## INNER (When pitching flysheet first)

- Open out inner tent inside flysheet and position doorways to correspond with the flysheet entrances.
- Starting from the top of the tent, suspend the inner by attaching toggles of inner tent with rings on inside of flysheet, ensuring the colour coded toggles match up correctly.
- At each bottom corner, clip in the buckles on the groundsheet to corresponding points on the flysheet anchor straps.

## ALL-IN-ONE PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

## ENDURANCE REFUGE 300 TENT



### Complete Parts List

- Outer Tent Bag
- Repair Kit – clipped inside tent bag
- Flysheet (green and grey)
- Inner (white walls with black groundsheet)
- Pole Bag containing:  
3 x grey poles (same length)
- Peg Bag containing:  
20 tent pegs

