

# PITCHING INSTRUCTIONS FOR SUMMIT TENT

## FLYSHEET FIRST PITCHING

- Assemble poles and lay them parallel on the ground (two longer diagonal poles and one shorter porch pole). The poles are colour coded to match corresponding pole sleeve entry point.
- Open out flysheet and position in desired direction.
- Take the two longer poles, and locate the ends which have a smooth end ferrule, as these are the ends which need to be inserted first.
- Locate the two front pole sleeves on outside of flysheet to insert the long poles, pushing them right through into the fabric sockets the opposite end.
- Insert the shorter porch pole into front pole sleeve over doorway, and again push this right through into the fabric socket the opposite side.
- Push both the two main poles into an arch and locate pole ends onto corresponding eyelet anchor points at the front of the tent.
- Push the diagonal porch pole into an arch and locate pole end onto corresponding eyelet on anchor straps.
- Peg down the tent at the base of each pole. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip.
- Pull out the porches and peg down elastic pegging points at the base using pin-pegs.
- Peg out all remaining flysheet pegging points on the base of the flysheet using pin-pegs.
- Peg down the strap that goes across the door, to prevent a tripping hazard.
- Peg out ALL guy lines using pin-pegs ensuring that the guy line fabric attachment points are evenly tensioned.
- Tighten up the adjustable tension straps, located at base of the poles to maximise stability.

## INNER (When pitching flysheet first)

- Open out inner tent inside flysheet and position the doorway to correspond with the flysheet entrance.
- Starting from the rear bottom corners of the tent, attach the buckles on the groundsheet to corresponding points on base of the flysheet.
- Suspend inner to flysheet by attaching elasticated toggles on inner tent to corresponding rings on inside of flysheet, ensuring the colour coded toggles match up correctly.

## ALL-IN-ONE PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

# ENDURANCE SUMMIT 300 TENT



## Complete Parts List

- Outer Tent Bag
- Repair Kit – clipped inside tent bag
- Flysheet (green and grey)
- Inner (white walls with black groundsheet)
- Pole Bag containing:  
2 x long grey poles  
1 x shorter orange pole
- Peg Bag containing:  
21 tent pegs

